
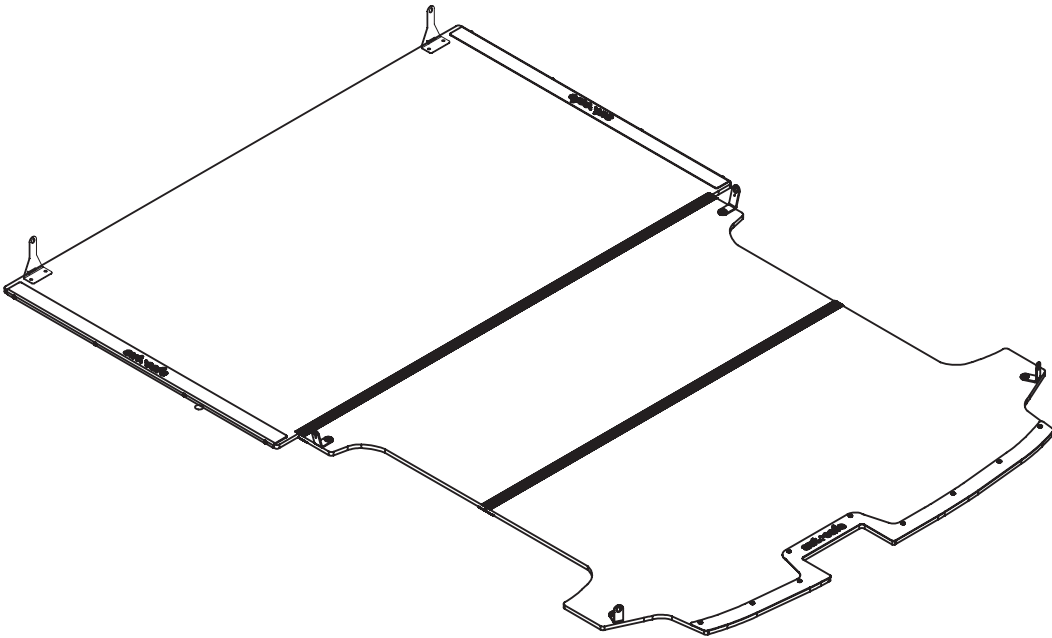



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	PTKTFFTCSWBFR	Floor Front	1
2	PTKTFFTCSWBMID	Floor Middle	1
3	PTKTFFTCSWBRR	Floor Rear	1
4	Floor Joiner Extrusion 1320	Floor Joiner Extrusion 1320	1
5	Floor Joiner Extrusion 1545	Floor Joiner Extrusion 1320	1
6	PTKTFFTCSWBB01	Floor Bracket 01	2
7	PTKTFFTCSWBB02	Floor Bracket 02	2
8	PTKTFFTCSWBB03V1	Floor Bracket 03	2
9	PTKTFFTCSWBSC	Rear Step Cap	1
10	10X12ZPPCRST	10g x 1/2 Zinc Pan Phillips Self Tapper	17
11	PTKT-SC1000	Step Cap 1000 Length	2
12	M6 Washer		8
13	14g x 3/4 self tappers	14g x 3/4 self tappers	8

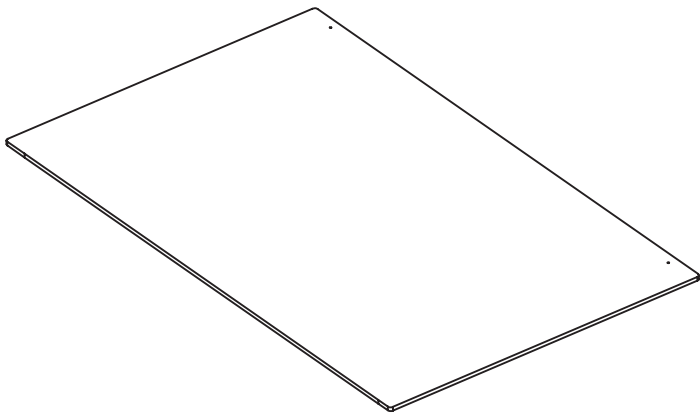


STEP 1 : CLEAR VEHICLE STOWAGE OF DEBRIS.
POSITION PTKTFFTCSWBFRT INTO POSITION TOWARDS
FRONT OF VEHICLE BEHIND CARGO BARRIER.
ENSURE TEXTURED FACE IS UPWARDS.






STEP 2 : SLIDE ON FLOOR JOINER 1520 TO EDGE
OF PTKTFFTCSWBFRT.
POSITION PTKTFFTCSWBMID ON OPPOSITE SIDE OF
JOINER AND FIT INTO POSITION.
ENSURE TEXTURED FACE IS UPWARDS.

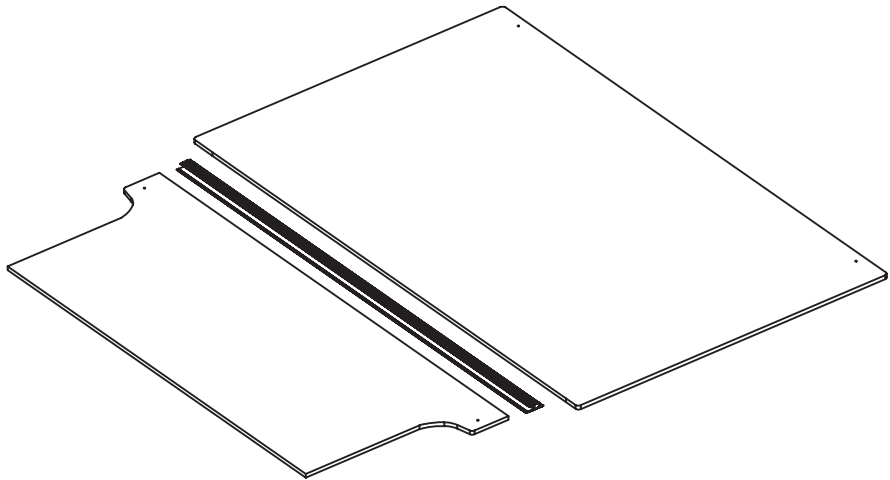


STEP 3 : SLIDE ON FLOOR JOINER 1340 TO OPPOSITE
EDGE OF PTKTFFTCSWBMID.
POSITION PTKTFFTCSWBRR ON OPPOSITE SIDE OF
JOINER AND FIT INTO POSITION.
ENSURE TEXTURED FACE IS UPWARDS.

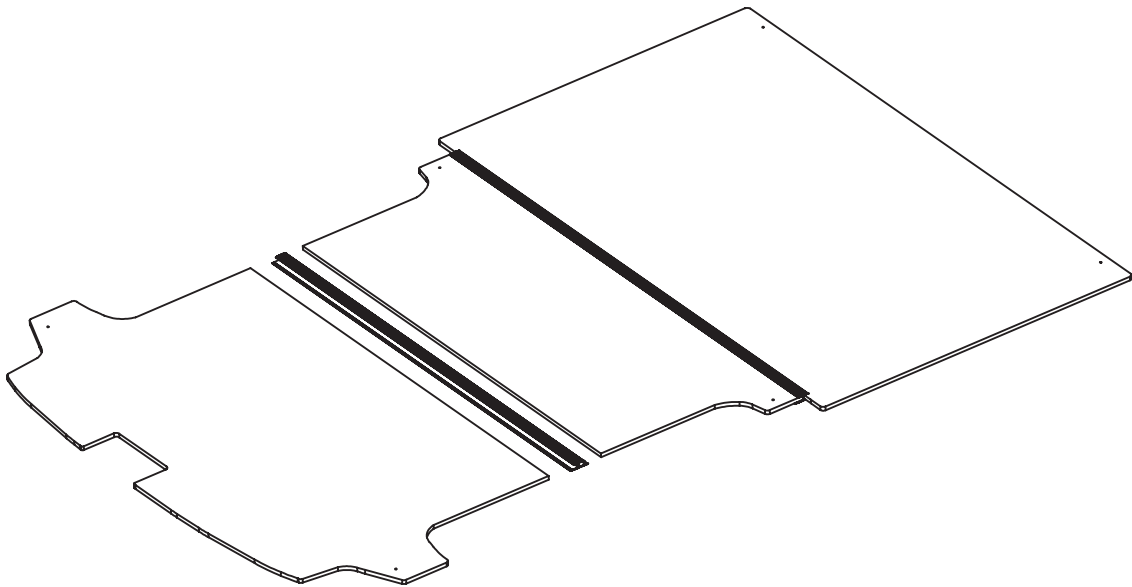


<div>UNLESS NOTED OTHERWISE DIMENSIONS IN MILLIMETRES</div> <div><div>Driven by Innovation</div></div>	Project: PTKTFFTCSWB		DRAWING APPROVAL		Snr.Management:		OPERATIONS:	
	DO NOT SCALE	Date: 24/03/2022	Print Date:	Configuration Height:		Configuration Width:		Status:
	PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED WITHIN THIS DRAWING IS THE SOLE PROPERTY OF AUTOSAFE. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AUTOSAFE IS PROHIBITED	Scale: SCALE:1:33	Sheet Size: A3	Configuration:			Vehicle: FORD TRANSIT 19 CUSTOM SWB	
		Sheet No. SHEET 2 OF 4	 AS1100	Description: Floor Protection			Drawn By:	

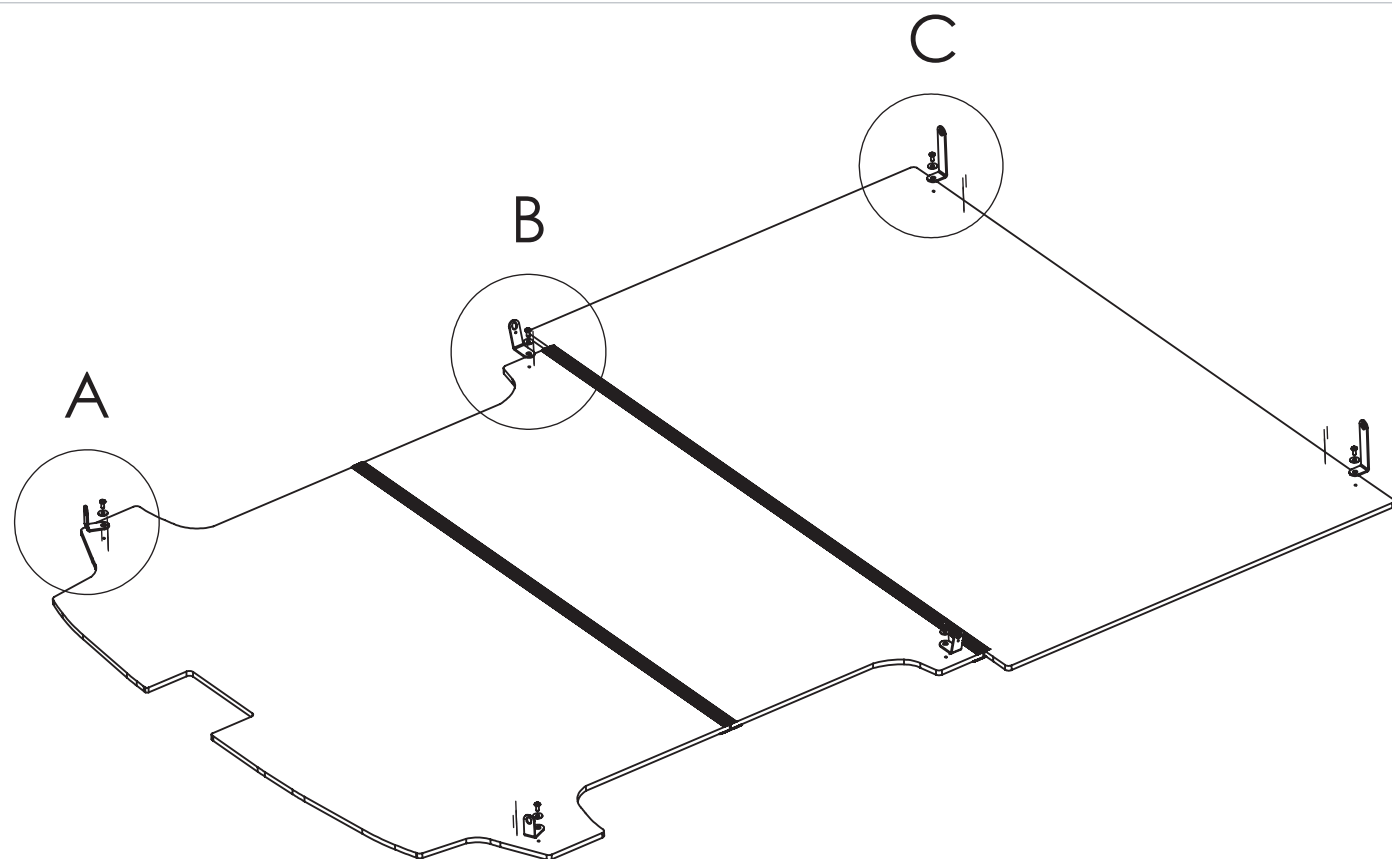


STEP 4 : FIT BRACKETS PTKTFFTCSWBB01, PTKTFFTCSWBB02 AND PTKTFFTCSWBB03 INTO POSITIONS AS SHOWN USING THE EXISTING CARGO TIE DOWN POINTS.
USE M6 WASHERS AND 14g x 3/4 Self-Tappers SCREWS TO FIT TO FLOOR.

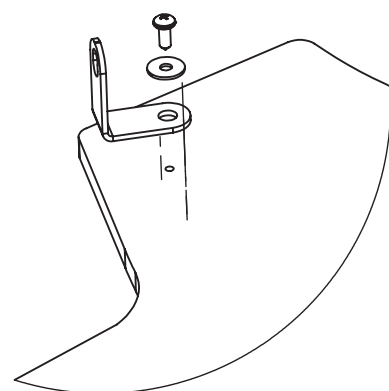

DETAIL A
SCALE 1 : 4

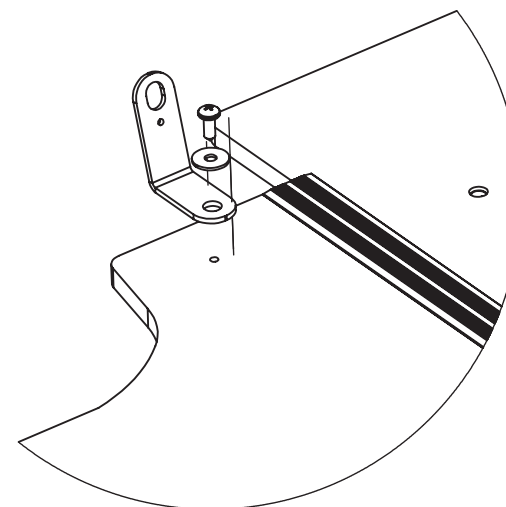




DETAIL B
SCALE 1 : 4

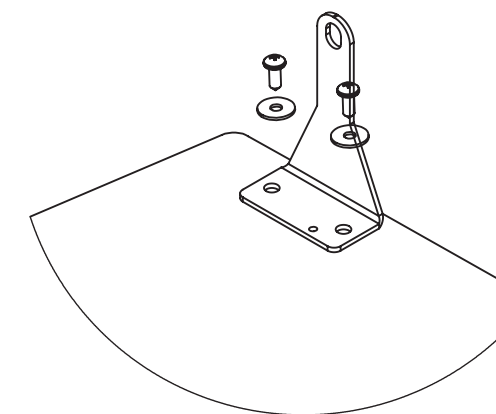

DETAIL C
SCALE 1 : 4

autosafe Driven by Innovation	Project: PTKTFFTCSWB		DRAWING APPROVAL		Snr.Management:		OPERATIONS:	
	DO NOT SCALE	Date: 24/03/2022	Print Date:	Configuration Height:		Configuration Width:		Status:
	<small>PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED WITHIN THIS DRAWING IS THE SOLE PROPERTY OF AUTOSAFE. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AUTOSAFE IS PROHIBITED</small>	Scale: SCALE:1:33	Sheet Size: A3	Configuration:			Vehicle: FORD TRANSIT 19 CUSTOM SWB	
		Sheet No. SHEET 3 OF 4	AS1100	Description: Floor Protection			Drawn By:	

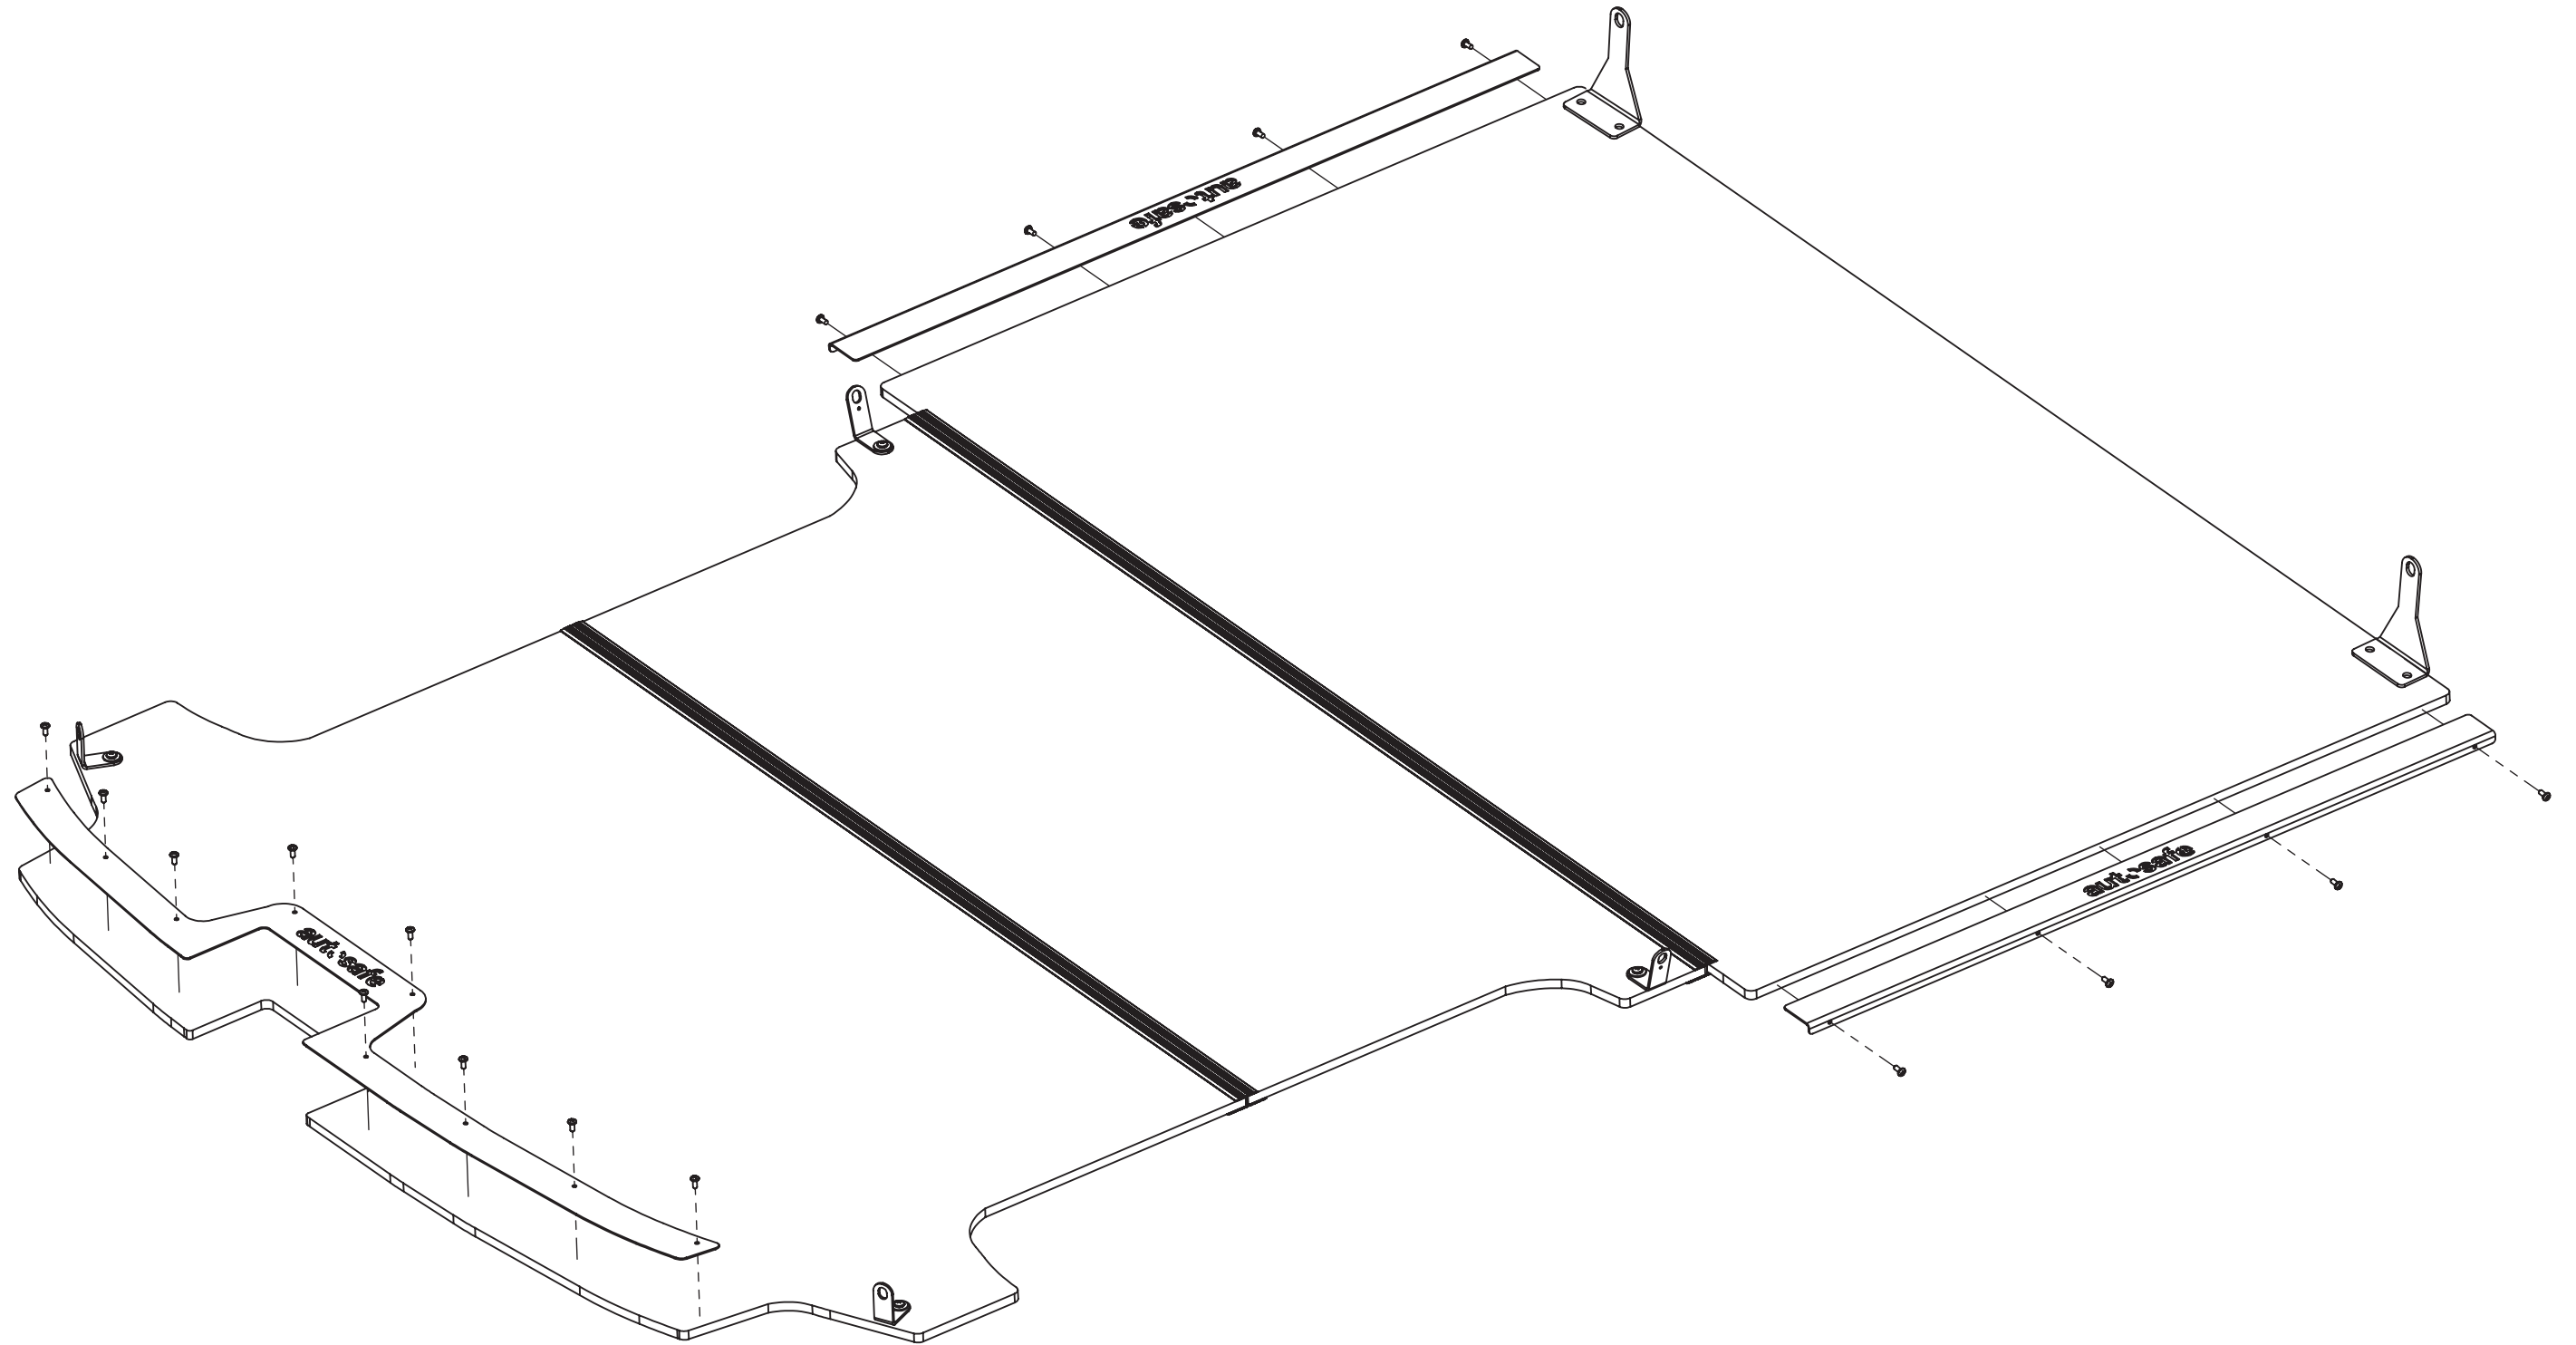

UNLESS NOTED OTHERWISE DIMENSIONS IN MILLIMETRES		Project: PTKTFFTCSWB		DRAWING APPROVAL		Snr.Management:		OPERATIONS:	
 Driven by Innovation		DO NOT SCALE	Date: 24/03/2022	Print Date:	Configuration Height:		Configuration Width:		Status:
		PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED WITHIN THIS DRAWING IS THE SOLE PROPERTY OF AUTOSAFE. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AUTOSAFE IS PROHIBITED	Scale: SCALE:1:33	Sheet Size: A3	Configuration:		Vehicle: FORD TRANSIT 19 CUSTOM SWB		
			Sheet No. SHEET 4 OF 4	 AS1100	Description: Floor Protection			Drawn By:	