




ITEM NO.	PART NUMBER	QTY.
1	PTKTFHILD-001	1
2	PTKTFHILD-002	1
3	PTKTFHILD-003	1
4	16X25MM SPACER	10
5	1484 JOINER ALLOY	1
6	1584 JOINER ALLOY	1
9	M10 WASHER	10
10	M10X55 FINE THREAD BOLT	10
11	PTKTFHILD-005	1
12	PTKTFHILD-004	2
13	SCREW 10G X 1/2	15

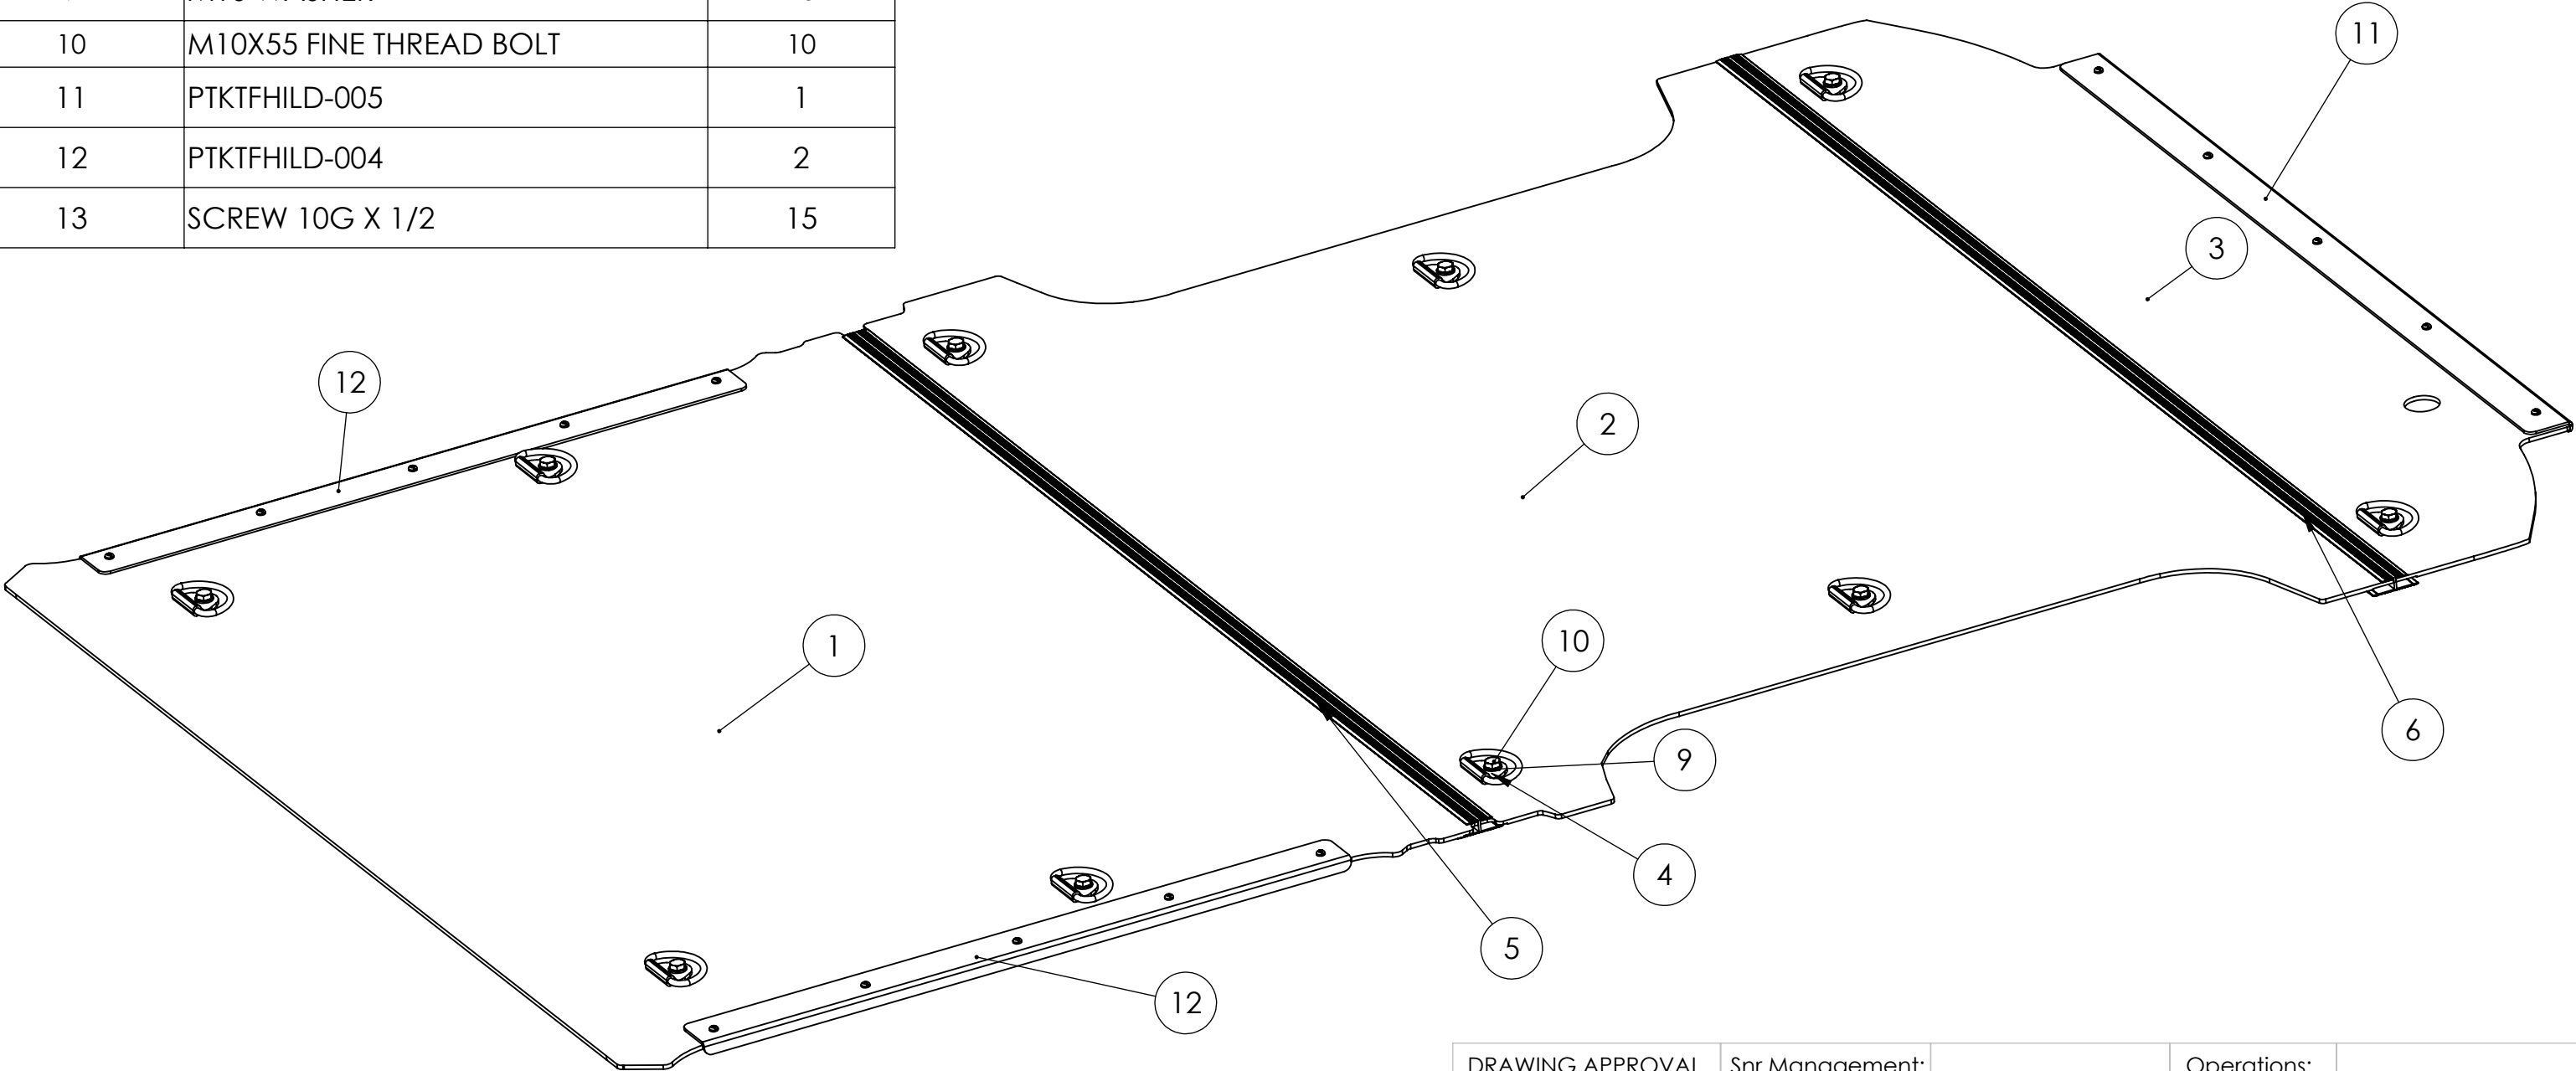


1-REMOVE FACTORY TIE DOWNS FROM VEHICLE CARGO AREA

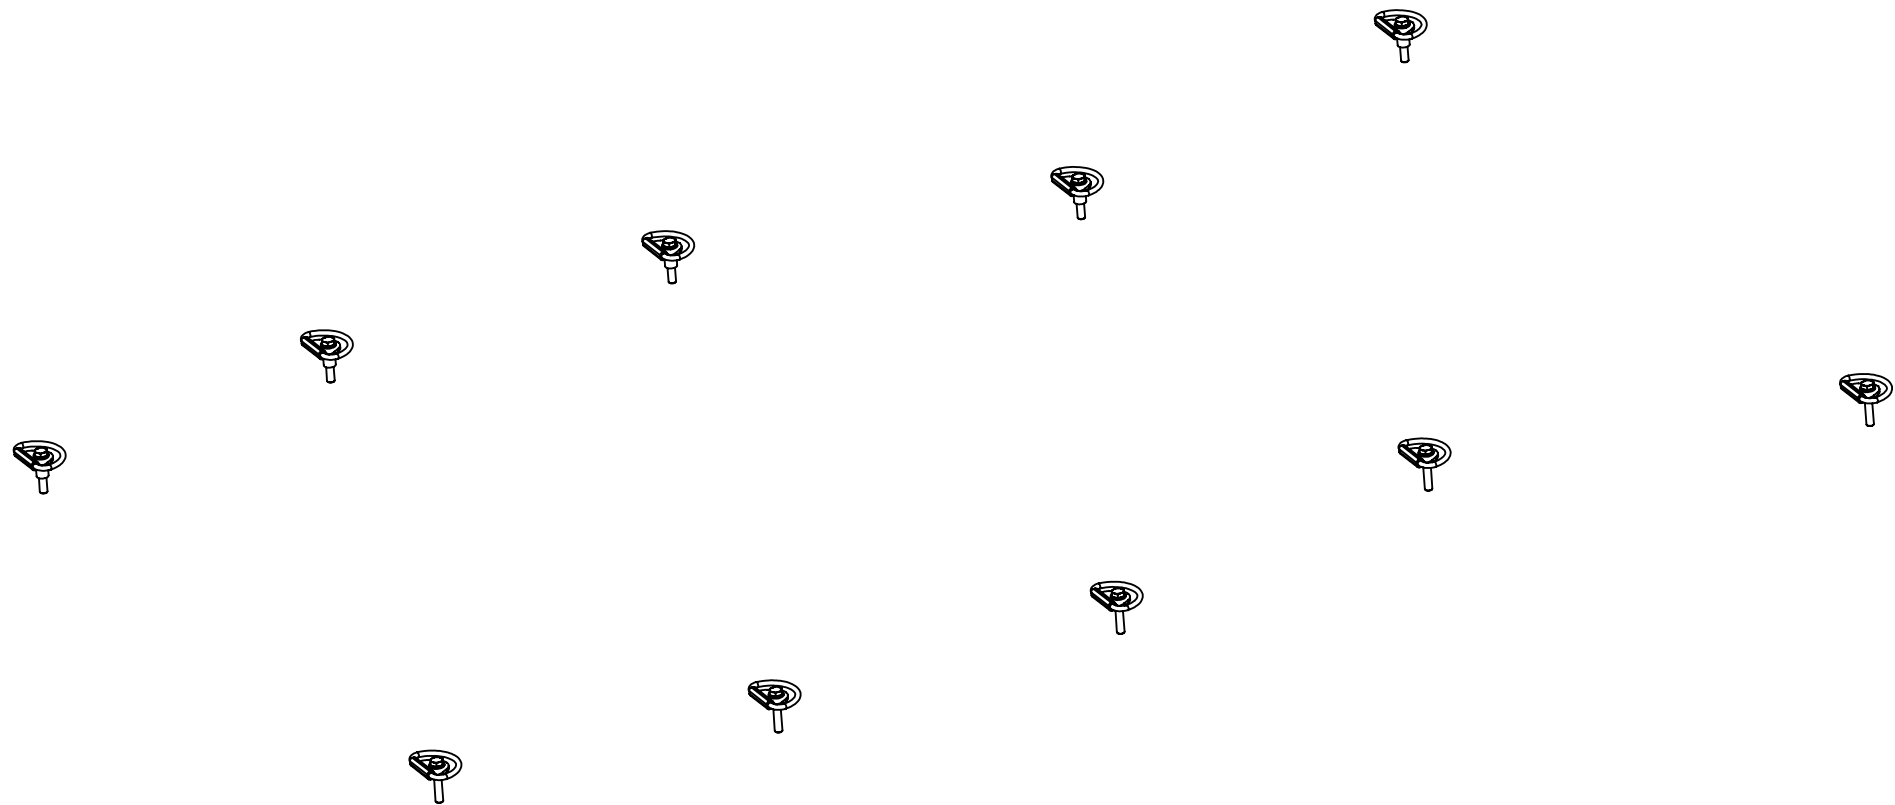

2-PLACE MIDDLE BOARD INTO POSITION OVER WHEEL ARCHES ENSURING GROOVED SURFACE IS FACING DOWN.
3-FIT 1484 JOINER TO FRONT OF BOARD AND 1584 JOINER TO REAR ENSURING LARGER FLANGE IS FACING DOWN.

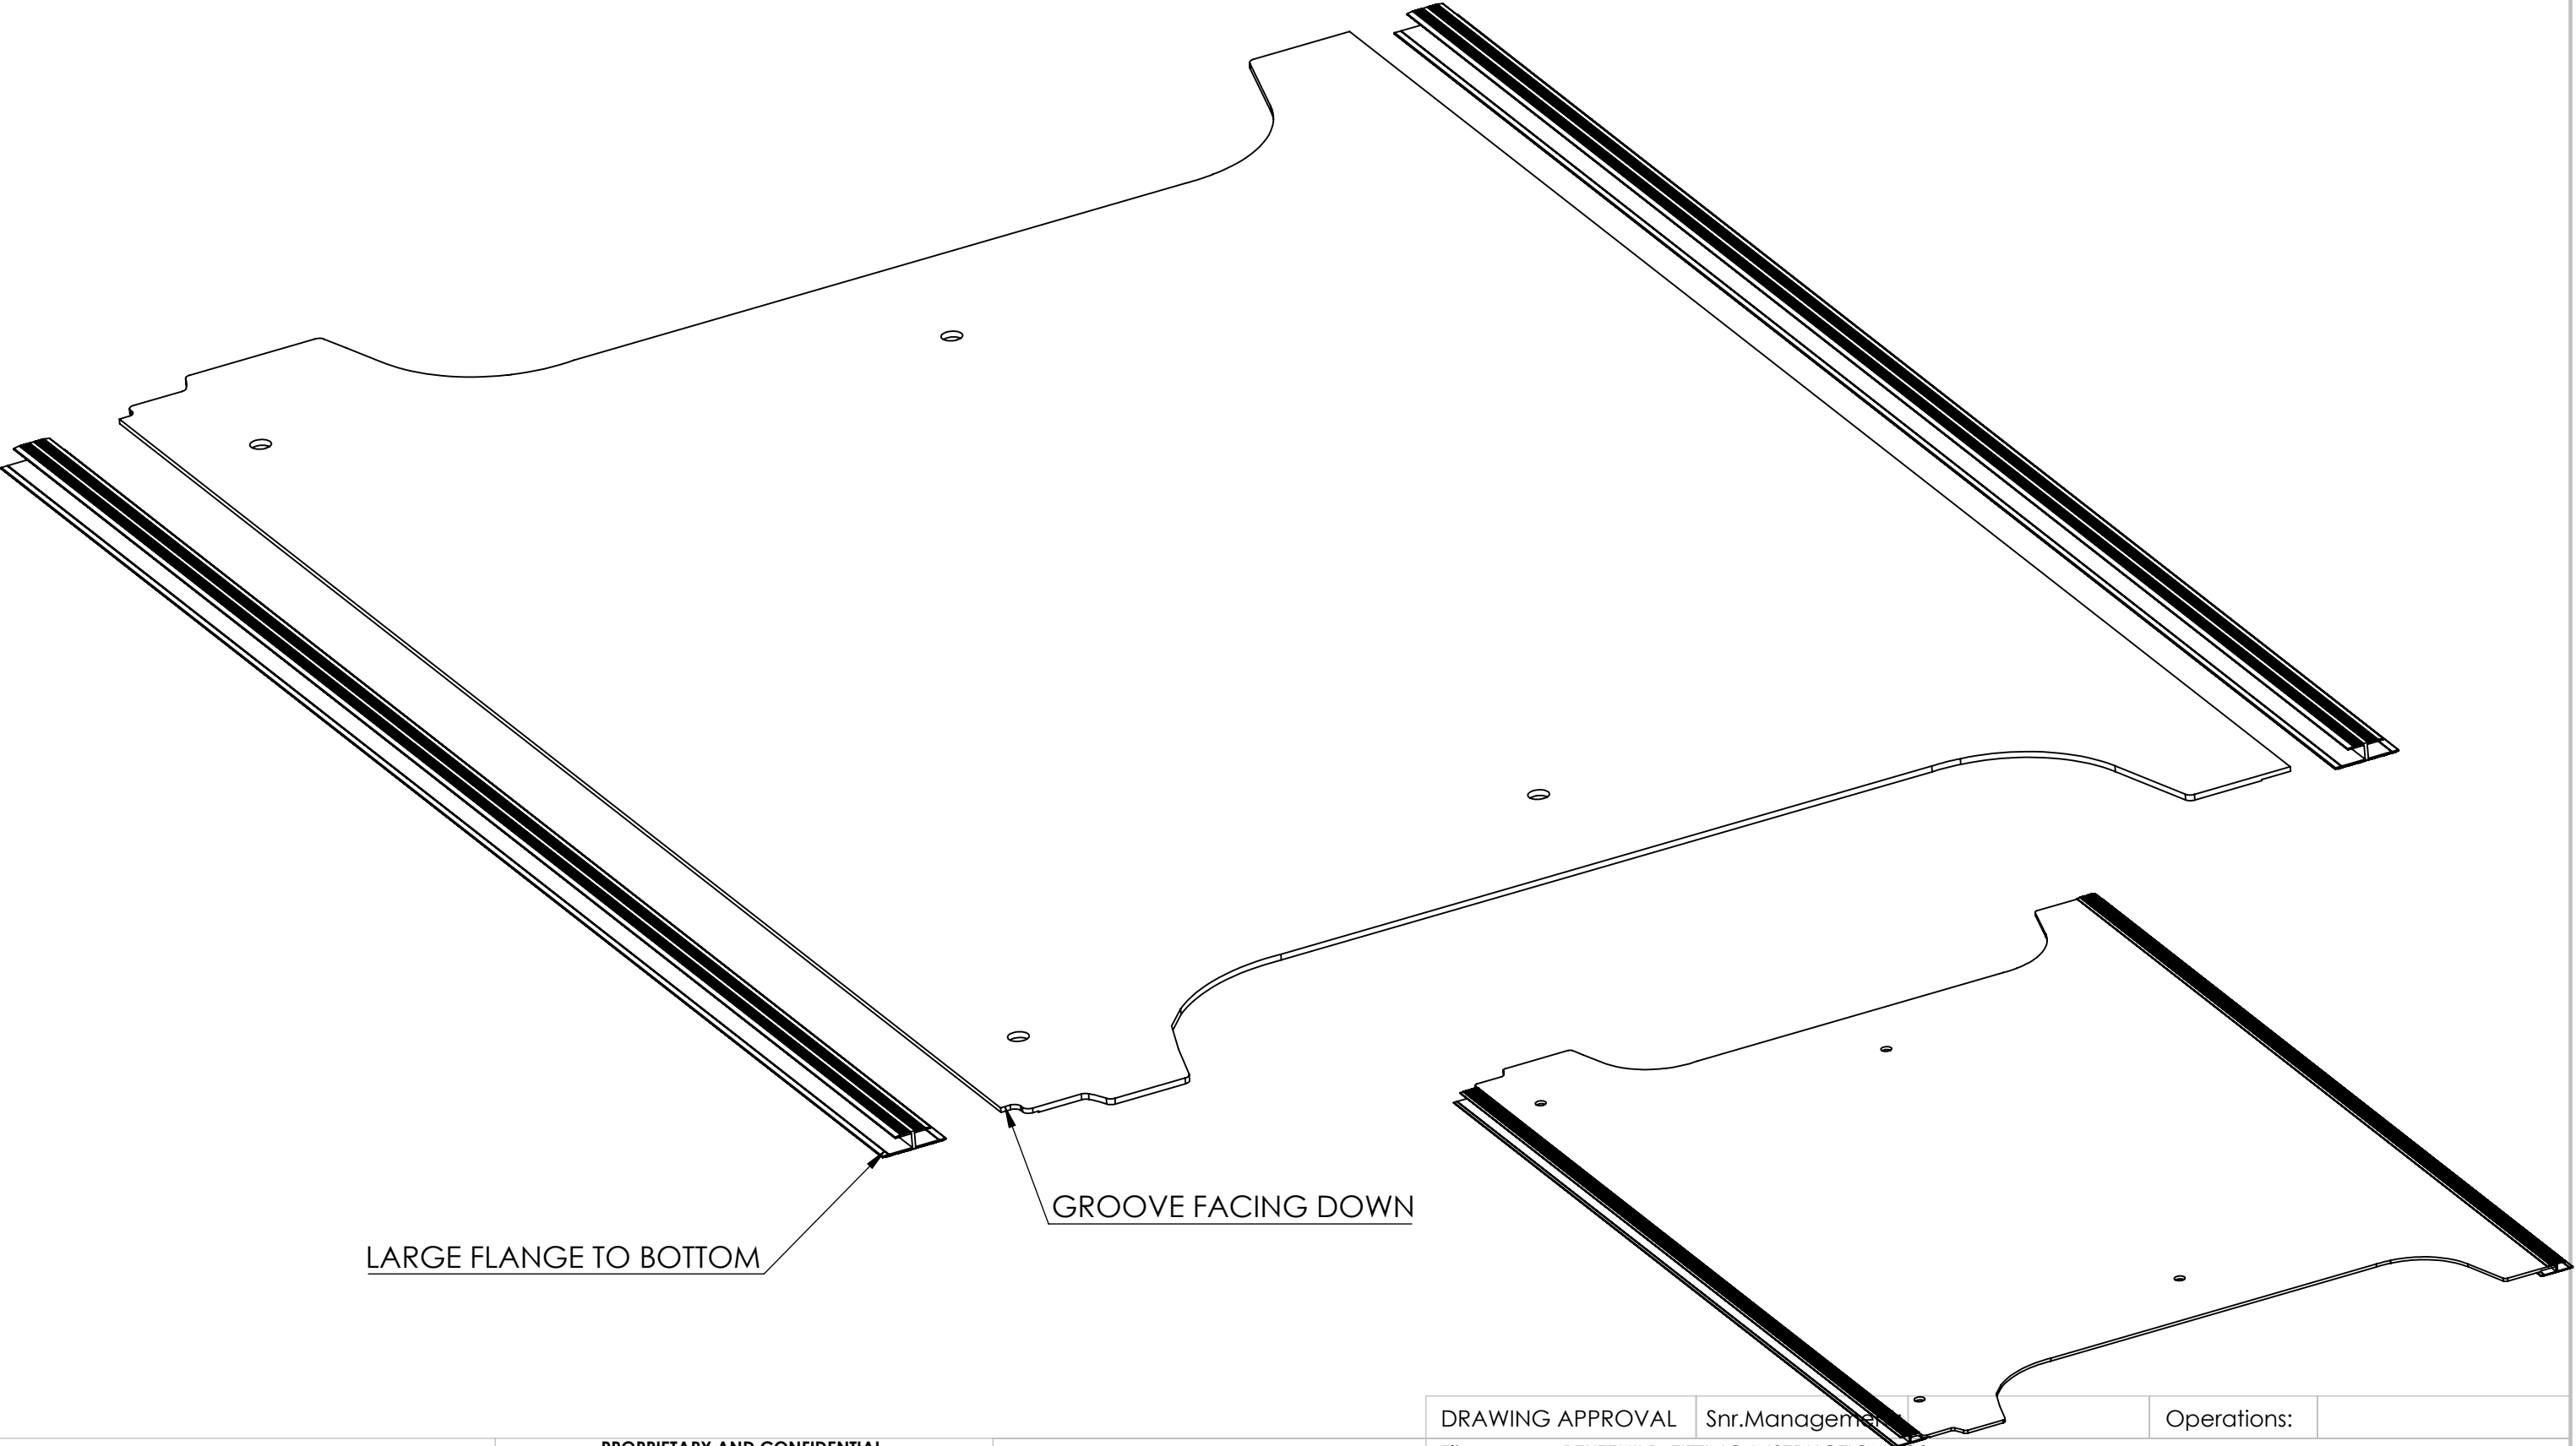


4-FIT FRONT PANEL INTO POSTION.
5-FIT REAR PANEL INTO POSITION.

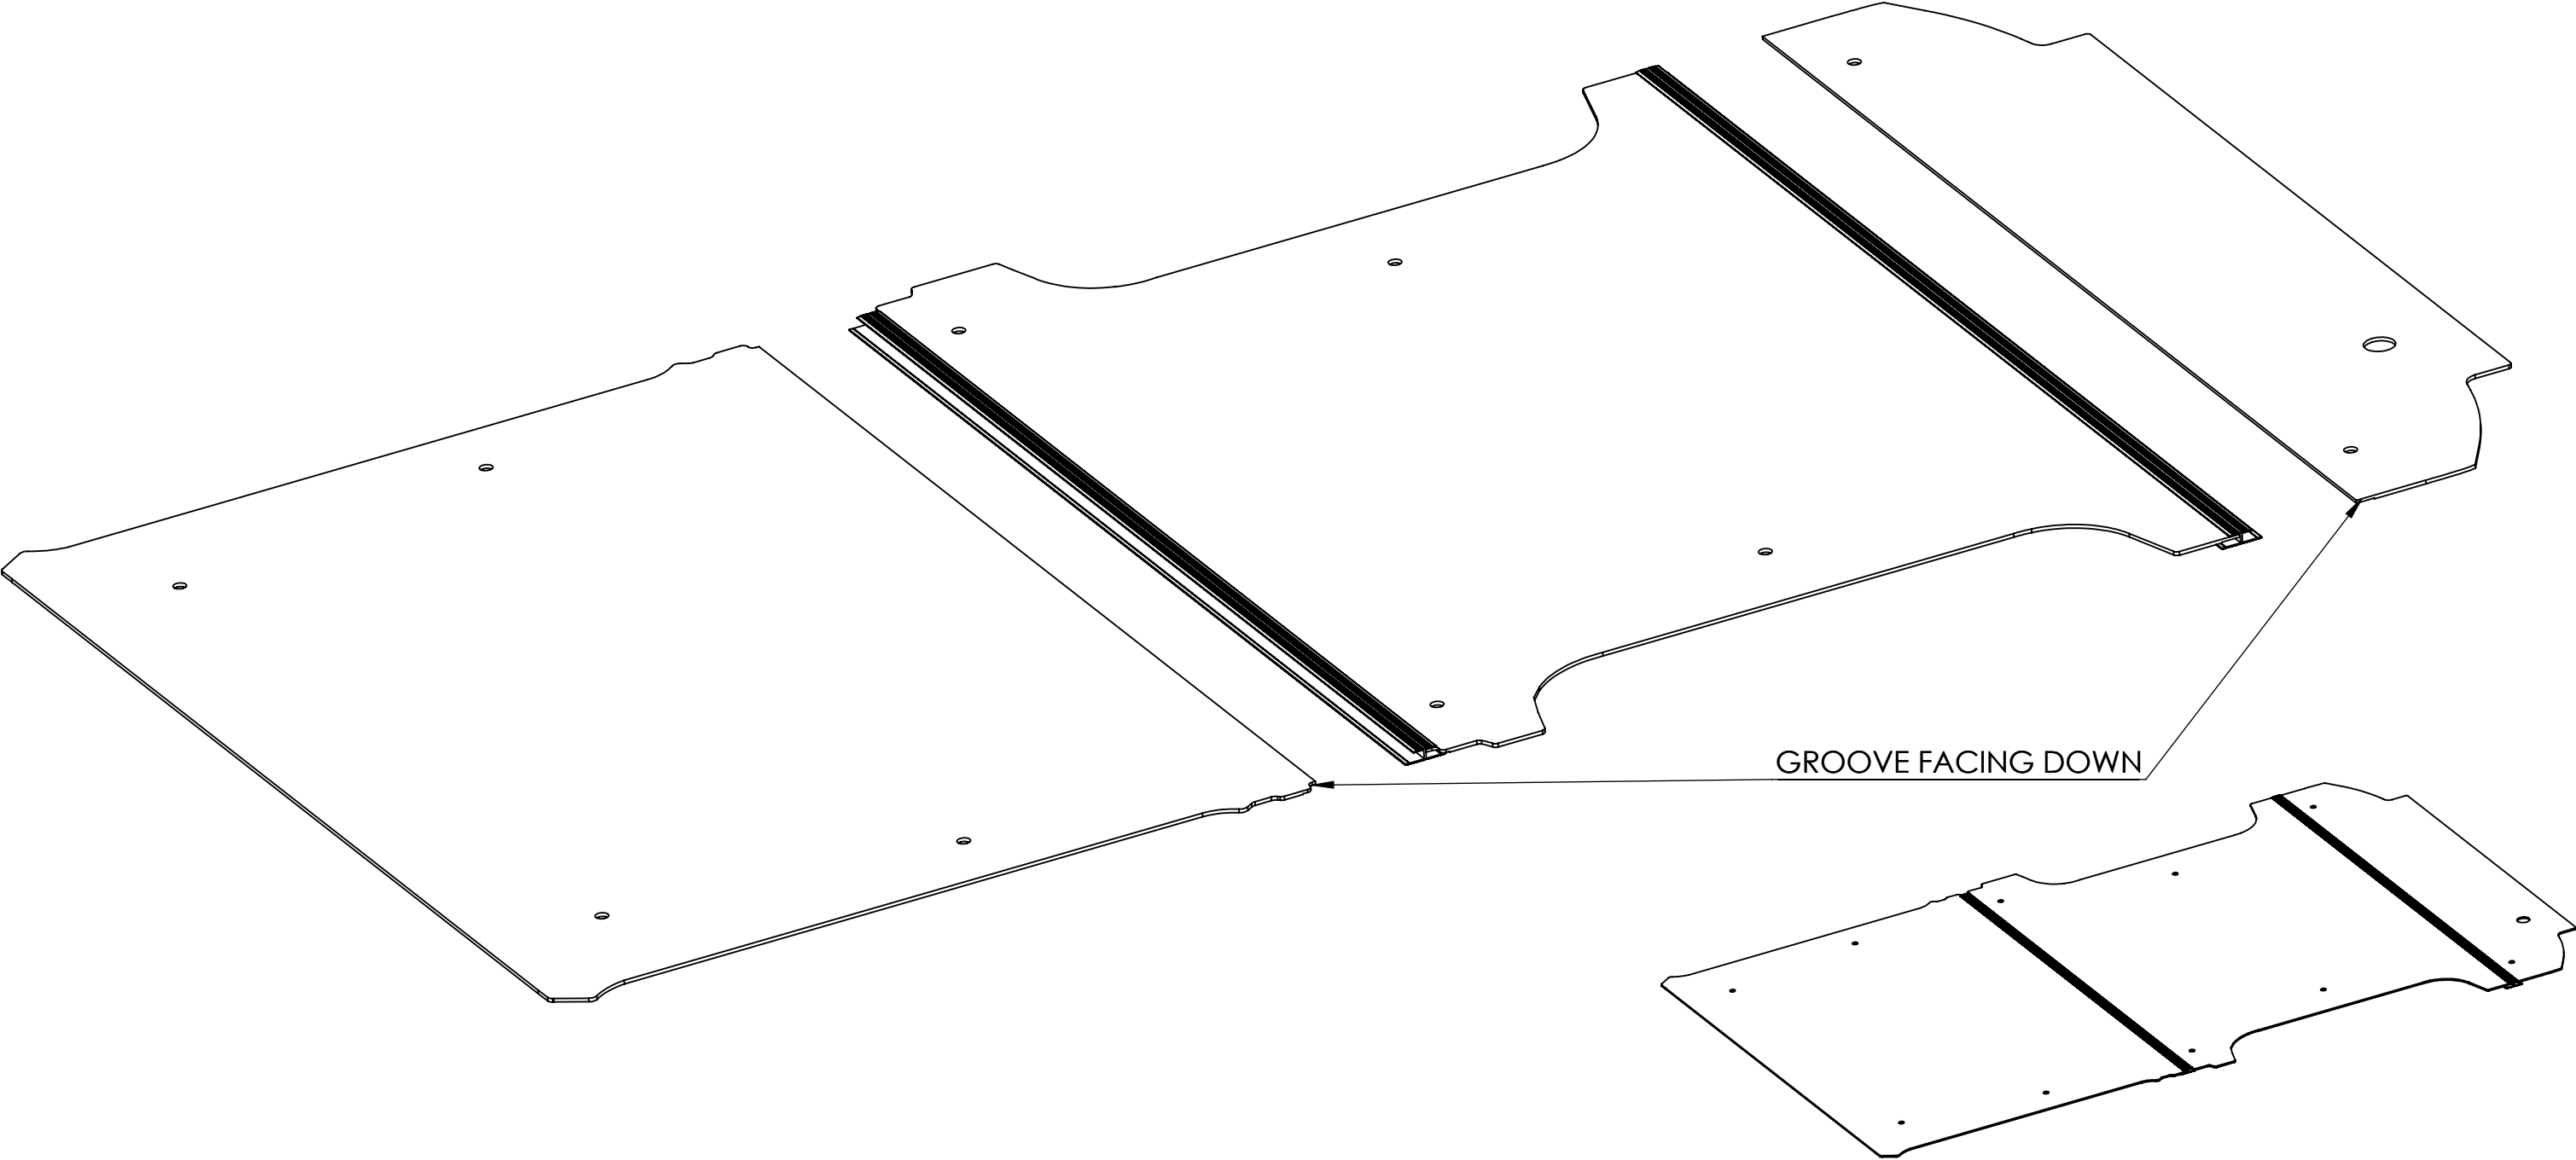

GROOVE FACING DOWN

- 6-DROP 16X25MM COLLARS INTO ALL HOLES IN FLOOR PANELS.
7-REMOVE SPACER TUBE,BOLT AND WASHERS FROM FACTORY TIE POINT ASSEMBLY.
8-PLACE TIE POINT RINGS OVER HOLES IN FLOOR PANELS.
9-FIT 10MM WASHER AND M10X55 FINE THREAD BOLT THROUGH RING TO FLOOR.
DO NOT FULLY TIGHTEN.
10-ORIENTATE RING POSITION TO DESIRED DIRECTION.
11-FULLY TIGHTEN ALL BOLTS.

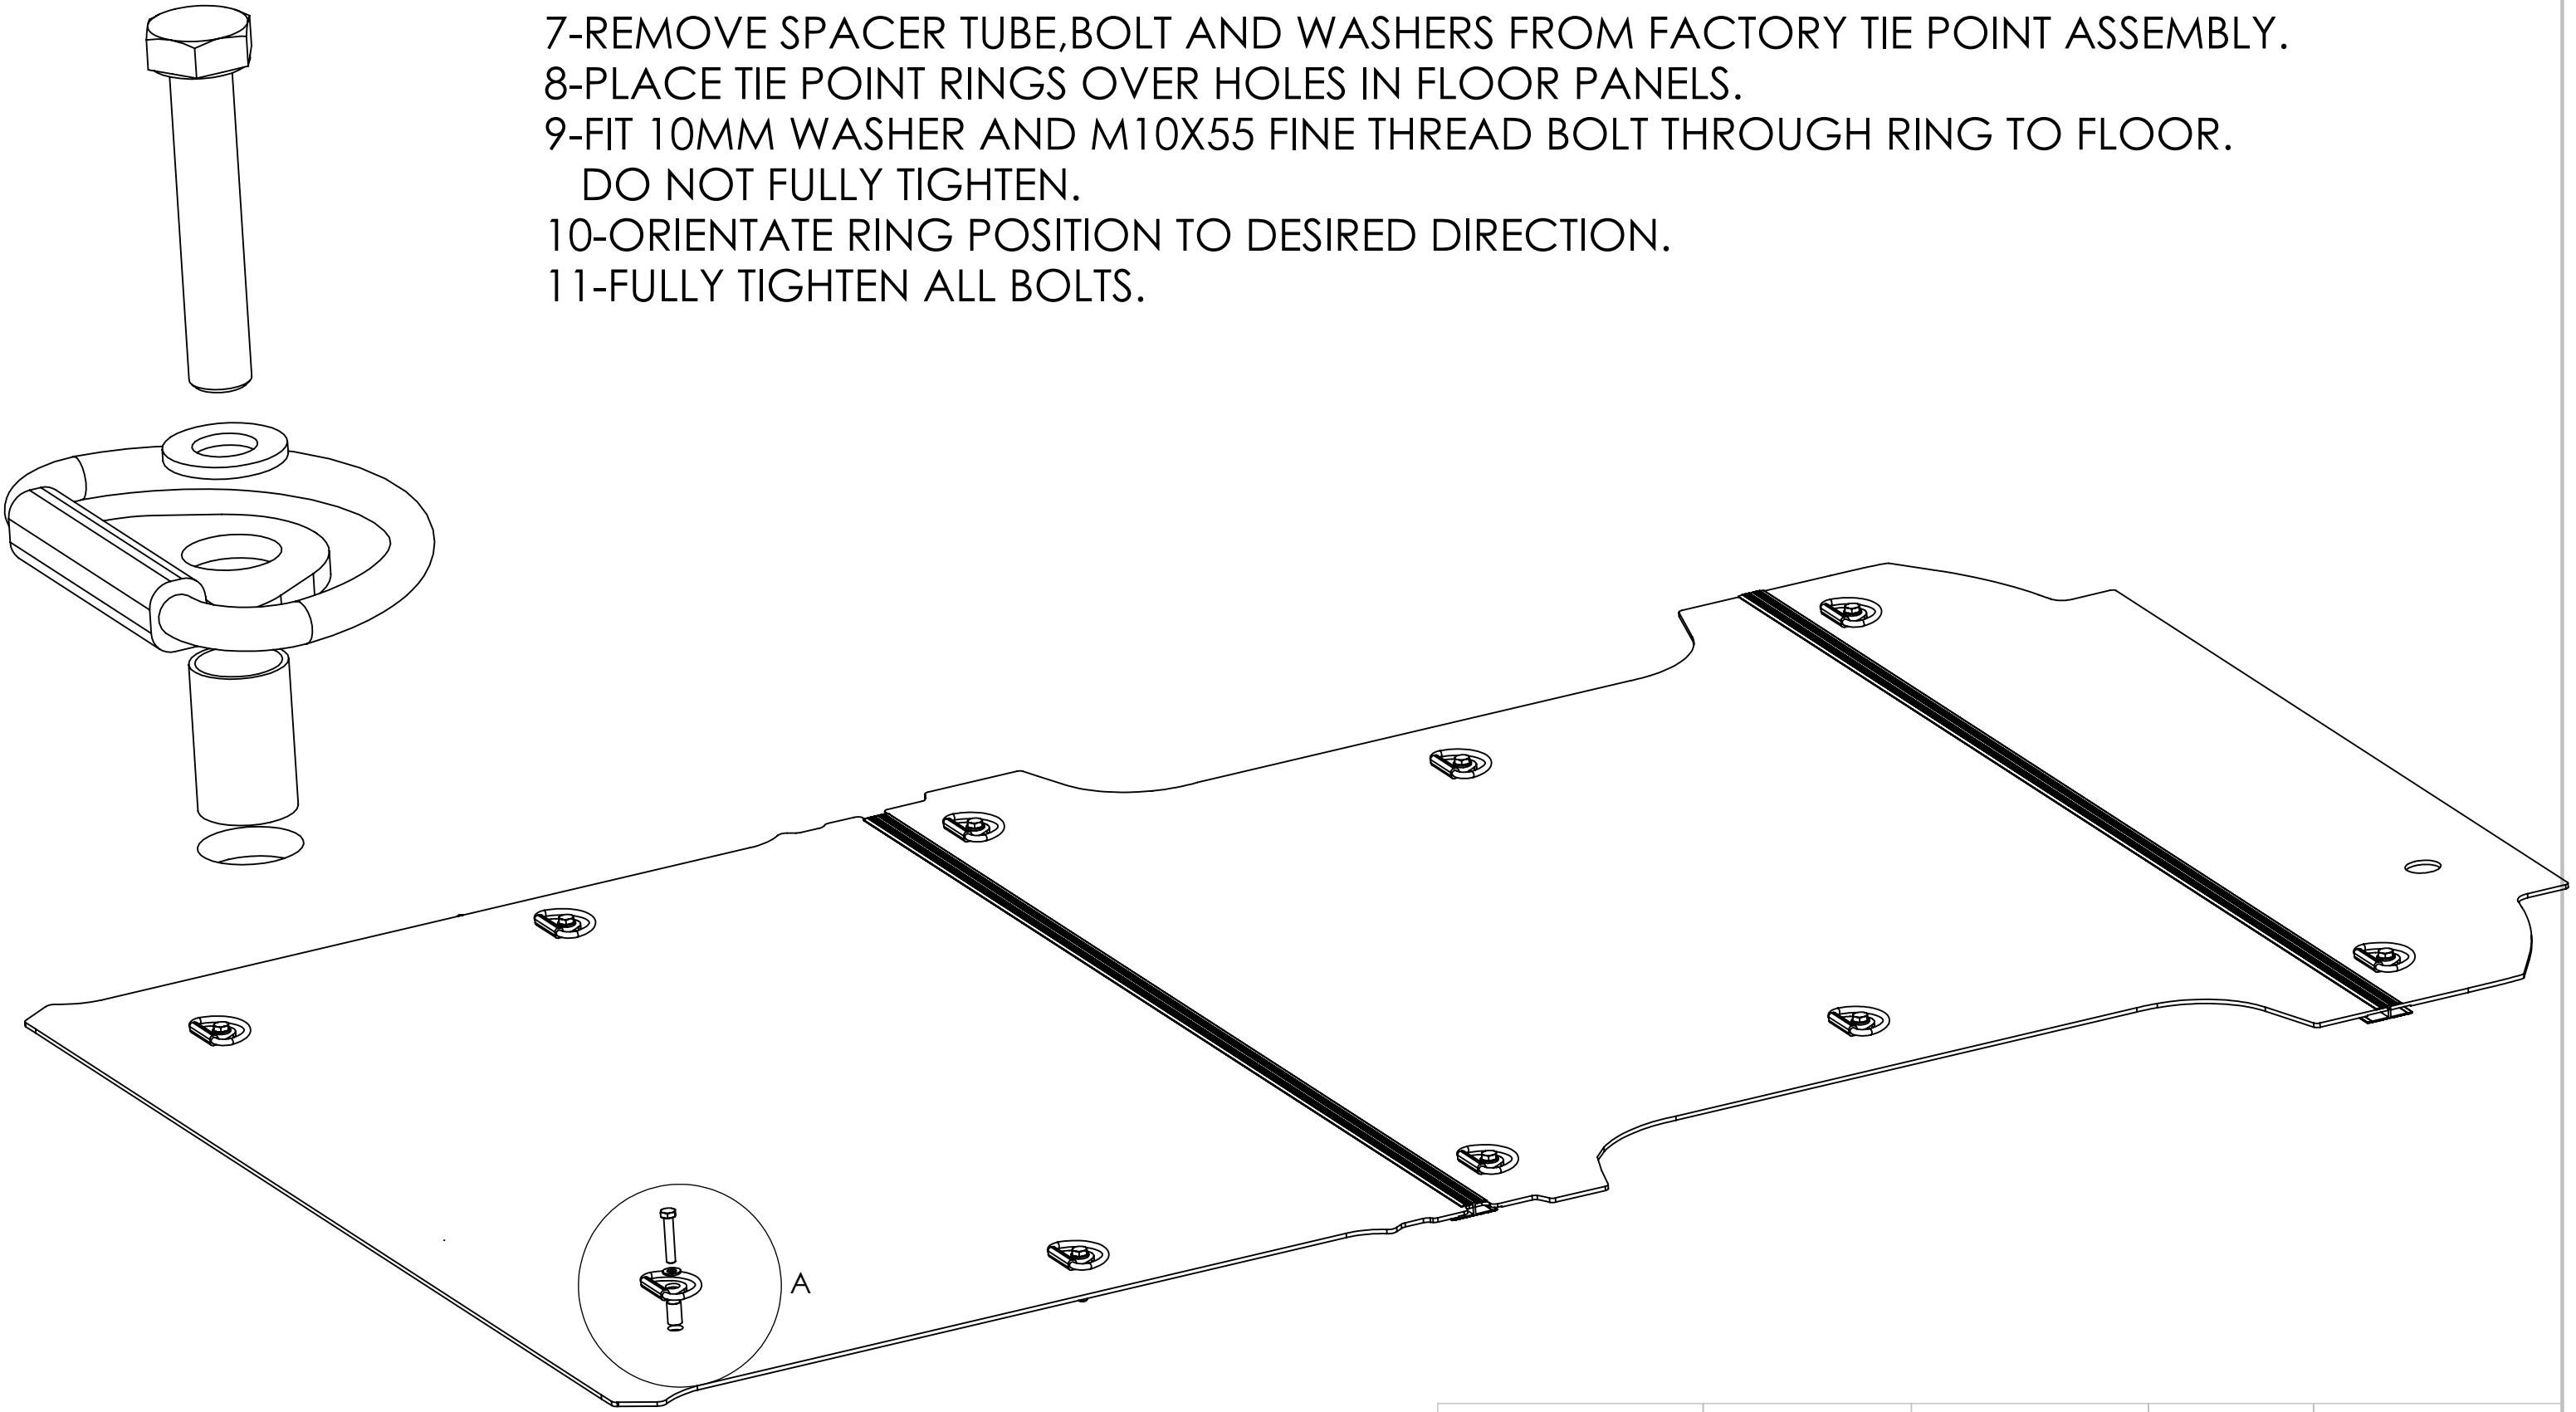

12-PLACE CAPS INTO POSTION AND SECURE USING SCREWS

