

**Congratulations on the purchase of your Australian made Wedgetail Roof Rack product.**

Please read and follow the instructions carefully to ensure correct fitment.











Contact us if any parts appear missing, incorrect, or damaged.

Contact us if any question about the size of platform to ensure the correct fitment

### **Tools Required:**

- Hex key (5mm)
- Socket
- Spanner (13mm,17mm)

### **Kit Content**

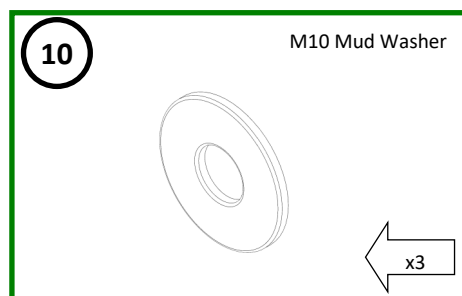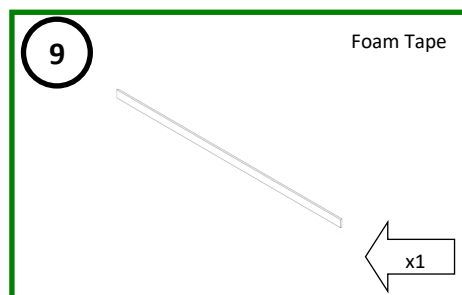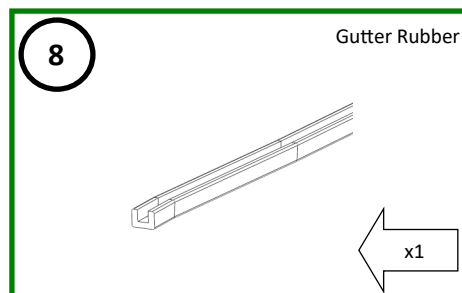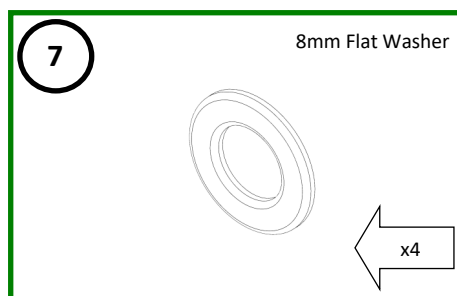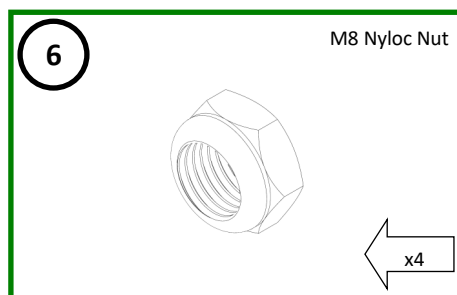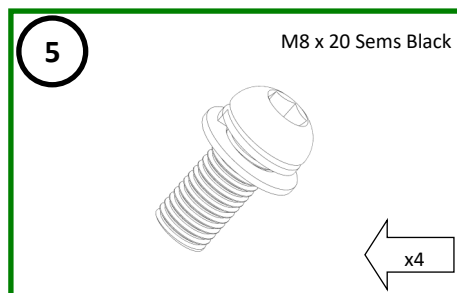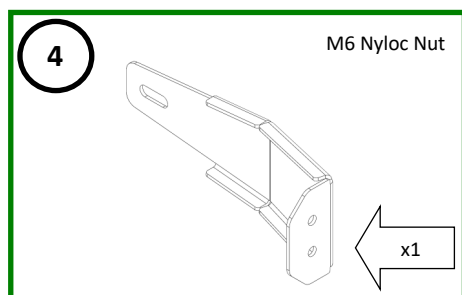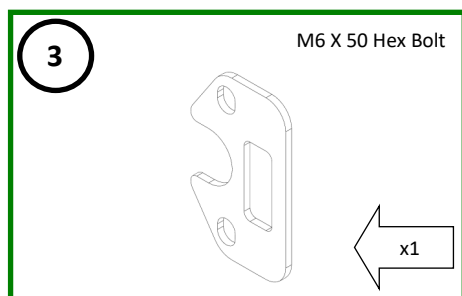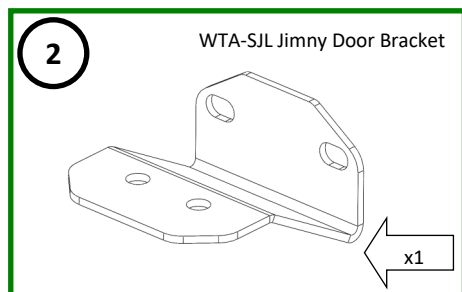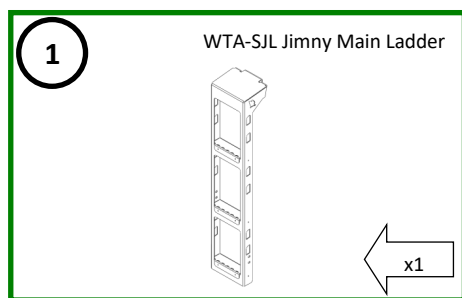


**1**

- Remove the spare wheel cover and spare wheel from the vehicle.
- Remove the black trim covering the lower door hinge and discard.


**2**

- Remove the lower 2 door hinge bolts
- Now secure the door hinge spacer and the door bracket with the factory door hinge bolts

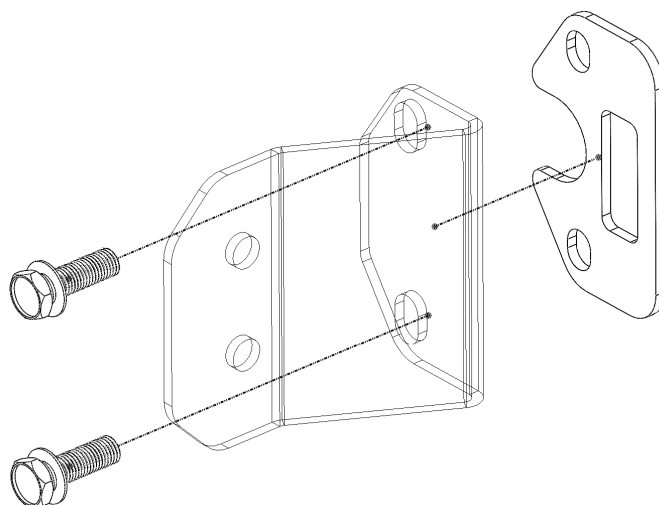

**3**

- Remove the spare wheel bracket, add the M10 Mud washers behind the lower 2 bolts and the top left bolt, and loosely secure to the vehicle.
- Now mount the spare wheel ladder bracket loosely to the vehicle.

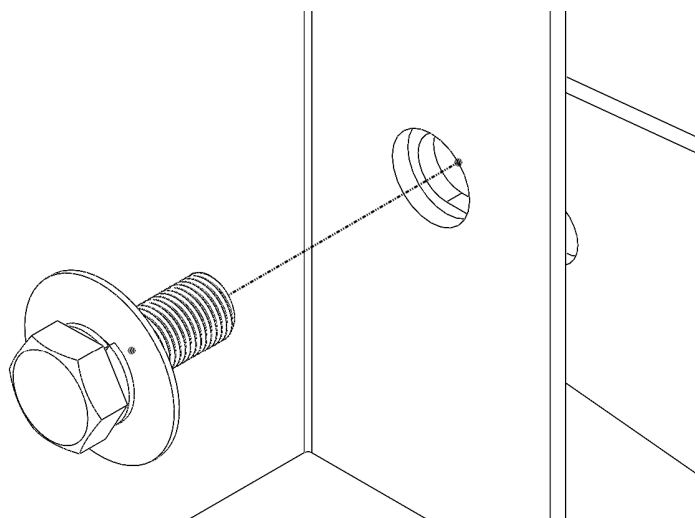


**4**

- Attach the rubber to the top of the rear door and foam tape to the 2 tabs on the ladder and attach to the door

**5**

- Bolt the ladder to the lower door hinge using M8 Bolts and loosely tighten the bolts
- Bolt the spare wheel bracket to the ladder using M8 Bolts and loosely tighten the bolts

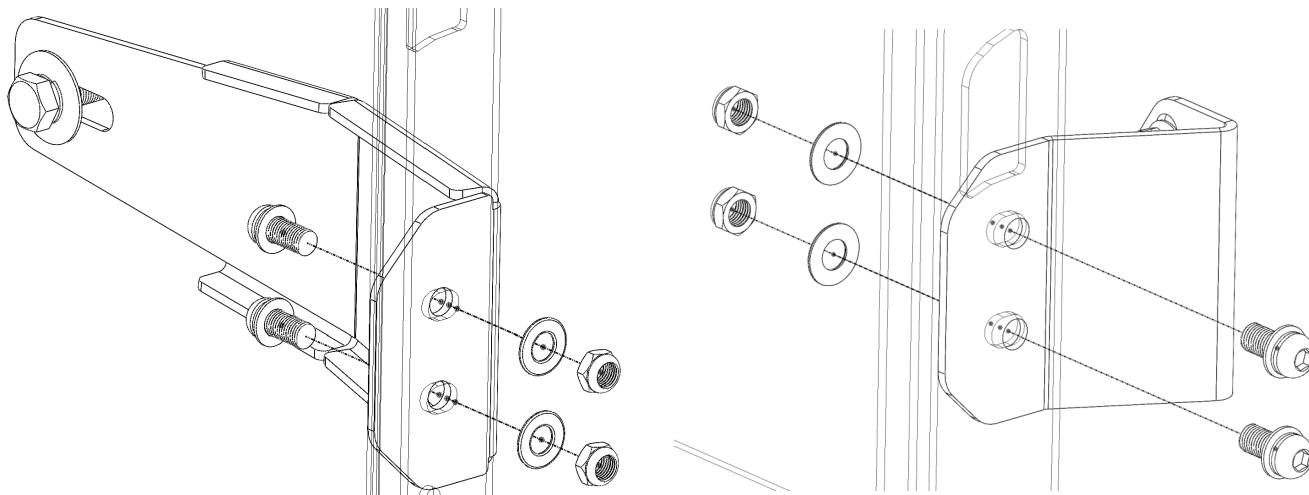

**6**

- Now adjust the ladder and tighten all the bolts starting with the lower door hinge and then the spare when bracket.
- Now tighten the 4 spare wheel bracket bolts and fit the spare wheel and cove to the vehicle

**Thank you for your purchase.**

**Wedgetail by Tradesman Roof Racks**

**Innovation through Inspiration**